Shanghai Newtrend Electric Co., Ltd.
No. 618 North Huting Road | 201615 | Shanghai | China
WhatsApp / WeChat: +86-18019187010 | sales@sntelec.com | www.sntelec.com

RT18-32X

32A / 690V AC / 10 x 38mm HOLDER

RT18-32X is a 32A DIN-rail fuse holder for 10 × 38mm cylindrical fuse links in compatible 690V AC circuits. The documented range includes 1P, 2P and 3P assemblies. The front includes a visible indicator window. The hinged carrier provides access to the fuse link, while screw terminals connect the circuit conductors. Holder and fuse link are specified separately.



Model	RT18-32X
Rated current	32A
Rated voltage	690V AC
Applicable fuse size	10 × 38mm
Assemblies illustrated	1P / 2P / 3P
Mounting	35mm DIN rail
Standard marking	IEC 269
Indicator window	Yes


Application and selection

For mounting compatible cylindrical fuse links in low-voltage AC distribution and control circuits. Select gG, aM or aR characteristics through the separately specified fuse link. Match its voltage, current and protective coordination to the circuit; the holder rating does not define an independent breaking capacity.

NT-RT18-32X-EN | 2026-11

Dimensions and ordering

RT18-32X / DIMENSIONS IN MILLIMETRES

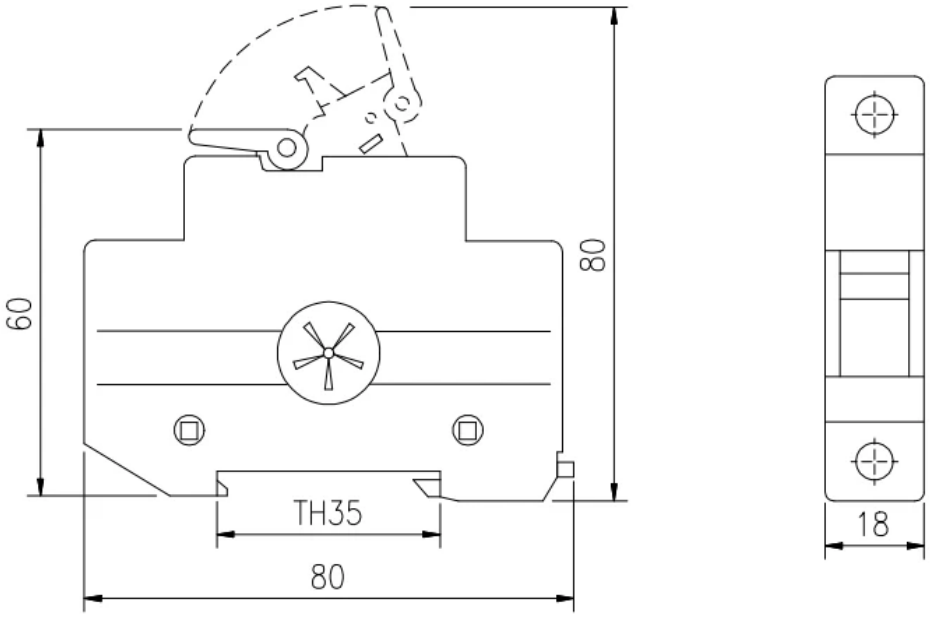

Overall length reference	80mm
Closed-height reference	60mm
Opened-height reference	80mm
Single-pole width	18mm
Rail mounting	TH35 / 35mm DIN rail

Specify your enquiry

Specify RT18-32X, 32A, 690V AC, 10 × 38mm, required pole arrangement and quantity. Specify fuse links separately, including their current rating and operating class. Follow the supplied terminal and mounting instructions.

NT-RT18-32X-EN | 2026-11

Assembly views and installation

RT18-32X / 2P AND 3P ASSEMBLIES



2P assembly



3P assembly

Installation and fuse replacement

1. Isolate the supply and verify that the circuit is de-energized.
2. Match the holder model, pole arrangement, fuse-link size and circuit rating.
3. Mount the assembly securely on a compatible 35mm DIN rail.
4. Connect conductors in accordance with the supplied terminal instructions.
5. Install the correctly selected fuse links and close each carrier securely before energizing.

The dimensional drawing on page 2 gives the single-pole width. Keep the complete assembly and wiring clearances suitable for the installation.

NT-RT18-32X-EN | 2026-11